

IMO Jaguar CUB & VXR Inverter

Set to factory default for use on a 50Hz supply.

- Disconnect all external remote control cables
- Turn on the power to the drive without running the motor.
- Press PRG/RESET
- Move up/down arrow buttons until 1.H _ _ is displayed
- Press FUNC/DATA
- Move up/down arrow buttons until H 03 is displayed
- Press FUNC/DATA (display shows 0)
- Press and hold the Stop button while pressing the up button until the display shows 1
- Press FUNC/DATA (display flashes SAVE)

The drive will now function as its original default factory settings using the keypad control.